 


Hikari

Assembly Instructions

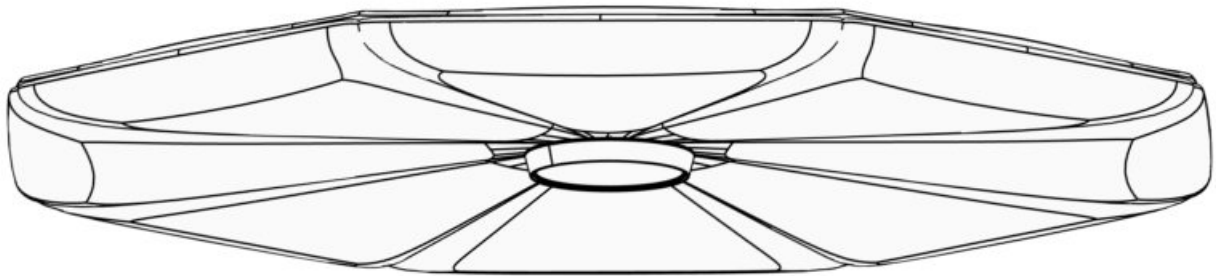

zilenziO

Assembly Instructions Hikari

Important Tips for Assembling Your Zilenzio Products

Handle Packaging with Care

When opening the packaging, use a knife carefully to avoid damaging the product.

Create a Safe Unpacking Space

Lay a blanket, use the inside of the box, or ensure the floor is clean and free from debris to protect your product during unpacking.

Keep It Clean

 
Always handle the products with clean hands to preserve their finish and appearance.

Mindful Placement

Place unassembled items gently. This small step helps protect the finish and ensures the products look flawless when assembled.

Avoid Sharp or Hard Surfaces

Never lean the products against sharp edges or hard surfaces. Doing so can cause indentations in the wooden frame or filling, which can be difficult to restore.

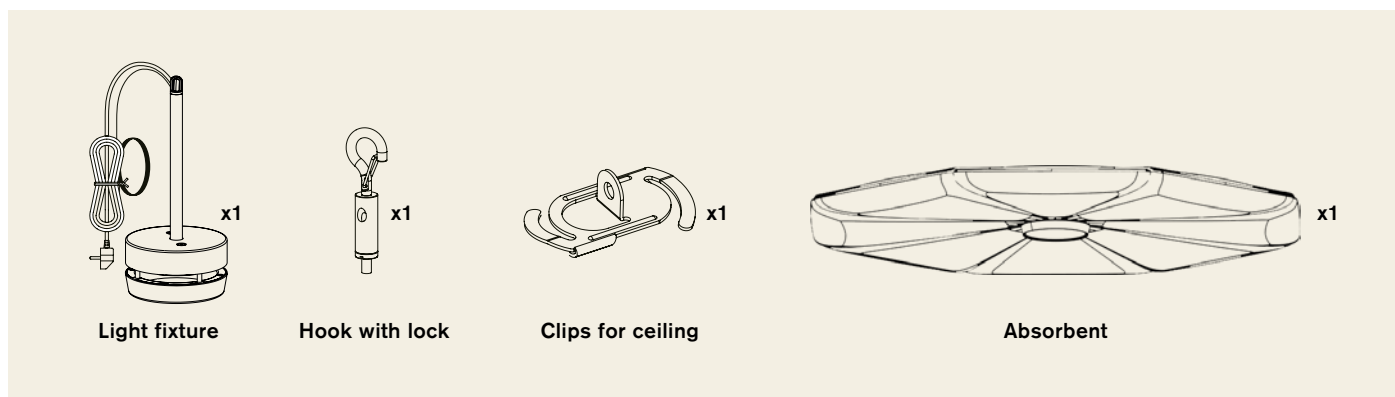

Safety instructions



EN Read these instructions carefully before commencing installation and retain for future reference. The luminaire should be installed by a licensed electrician and in accordance with local regulations. Make sure that the power is off before installation or maintenance.

SV Läs dessa instruktioner före installationen påbörjas och lämna den vidare till brukaren av anläggningen. Armaturen skall installeras av behörig installatör och enligt gällande föreskrifter. Se till att spänningen är frånslagen före installation eller underhåll.

DE Lesen Sie diese Anweisungen sorgfältig, bevor Sie mit der Installation beginnen, und bewahren Sie sie für späteres Nachschlagen auf. Dieses Leuchtmittel muss durch einen lizenzierten Elektriker im Einklang mit den örtlichen Vorschriften installiert werden. Stellen Sie vor Installations- oder Wartungsarbeiten sicher, dass keine Spannung mehr anliegt.

Weights


ø600 mm	3 kg
ø800 mm	6 kg
ø1100 mm	7 kg

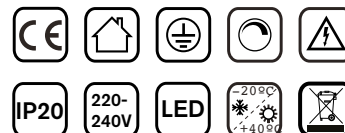  


Assembly Instructions Hikari

Installation

 
1

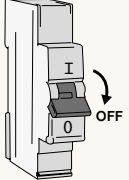


2

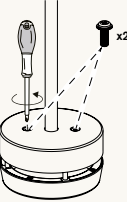 


3

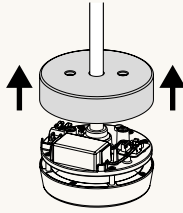 

4

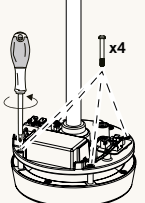 


5

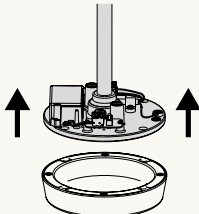 


6

 Remove the paper card.

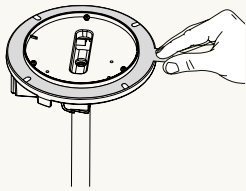


7

 DIP SWITCH
on LED module

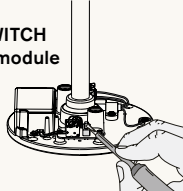


NOTE! Only change when fixture is OFF.

 
8

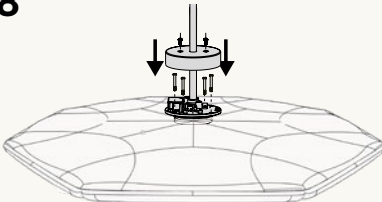


9

 


10

 


11

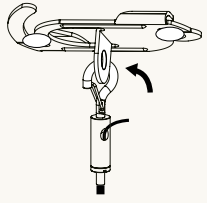 


 

 
Insert the wire into the gripper. Always insert the wire through the pin unless otherwise stated.



 Adjust the gripper down. When you let go of the gripper it will automatically lock itself on the wire.



 Press the pin and adjust up. When you press the pin the lock opens and the gripper slides on the wire. Release pin to lock again.

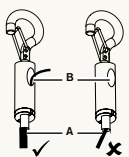

A. Direction of wire and gripper must be in straight line.
B. The wire must be inserted all the way through the gripper and protrude at least 0.2 inch from the bottom.

zilenzio