


QUICK GUIDE

Flexlock Invisible Mifare 13.56 MHz

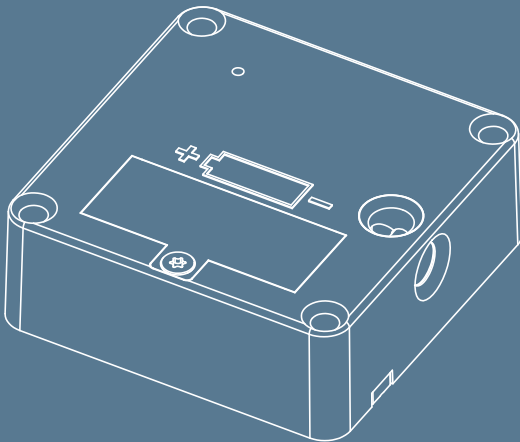

PROGRAMMING

Remove or add users in Mode 1 or Mode 2



- 1 Place the programming card on the lock.



- 2 The programming signal will sound for 7 seconds.



- 3 Place the user card to be added or removed on the lock.



- 4 An confirmation or erase signal will sound.

Continue adding users by repeating.
Maximum 200 users.

Wait 5 seconds before you check.
If the user card is removed an error signal will sound.

PROGRAMMING

Change Mode 1 to Mode 2, 3, 4 or 5



- 1 Place the programming card on the lock.



- 2 The programming signal will sound for 7 seconds.



- 3 Place the desired mode card on the lock within 7 seconds.



- 4 A double confirmation signal will sound.

When changing between modes you always have to reset the lock to Mode 1.

PROGRAMMING

From mode 2, 3, 4 or 5 to mode 1



- 1 Place the programming card on the lock.



- 2 The programming signal will sound for 7 seconds.



- 3 Place the mode card you are programming from within these 7 seconds.



- 4 A confirmation signal will sound.

PROGRAMMING LOCKS IN MODE 1 OR 2

Add Ready to use



- 1 Place the programming card on the lock.



- 2 The programming signal will sound for 7 seconds.



- 3 Place the Ready to use card on the lock within 7 seconds.



- 4 A double confirmation signal will sound.

The lock is now ready for a new unique user that will be added to the lock.

PROGRAMMING

Sound on/off



- 1 Place the programming card on the lock.



- 2 The programming signal will sound for 7 seconds.



- 3 Place the Sound on/off card on the lock within 7 seconds.



- 4 ON: A double confirmation signal will sound.
OFF: The signal will stop sounding.

If the sound is on. Users will now hear a confirmation signal when opening or closing the lock.

PROGRAMMING

Reset the lock to Mode 1



- 1 Place the programming card on the lock for 10 seconds.



- 2 A reset signal will sound.



- 3 Wait 10 seconds, then place the programming card on the lock again.



- 4 Repeated signals will sound for 7 seconds.



- 5 Place the service card on the lock within 7 seconds.



- 6 A confirmation signal will sound.

PROGRAMMERING

Ta bort/lägg till användare i Mode 1 eller Mode 2



- 1 Placera programmeringskortet över låset.



- 2 Jämna toner hörs i 7 sekunder.



- 3 Placera det användarkort som ska läggas till/tas bort över låset.



- 4 En bekräftelseton eller raderingston hörs.

Repetera till önskat antal användare.
Max 200 användare.

För att testa, vänta 5 sekunder och håll användarkortet över låset. Om användaren är borttagen hörs en felsignal.

PROGRAMMERING

Ändra Mode 1 till Mode 2, 3, 4 eller 5



- 1 Placera programmeringskortet över låset.



- 2 Jämna toner hörs i 7 sekunder.



- 3 Placera önskat mode-kort över låset inom 7 sekunder.



- 4 En dubbel bekräftelseton hörs.

Vid byte mellan olika modes måste man alltid återställa låset till Mode 1.

PROGRAMMERING

Från Mode 2, 3, 4 eller 5 till Mode 1



- 1 Placera programmeringskortet över låset.



- 2 Jämna toner hörs i 7 sekunder.



- 3 Placera det Mode-kort som du programmerar från över låset inom 7 sekunder.



- 4 En bekräftelseton hörs.

PROGRAMMERA LÅS I MODE 1 ELLER 2

Lägg till Ready to use



- 1 Placera programmeringskortet över låset.



- 2 Jämna toner hörs i 7 sekunder.



- 3 Placera Ready to use-kortet över låset inom 7 sekunder.



- 4 En dubbel bekräftelseton hörs.

Låset är nu redo för en ny användare som kommer att adderas till låset som unik användare.

PROGRAMMERING

Ljud av/på



- 1 Placera programmeringskortet över låset.



- 2 Jämna toner hörs i 7 sekunder.



- 3 Placera Sound on/off-kortet på låset inom 7 sekunder.



- 4 PÅ: En dubbel bekräftelseton hörs. AV: Tonerna tystnar.

Om ljudet är aktiverat kommer användarna att höra en bekräftelseton när låset öppnas eller stängs.

PROGRAMMERING

Återställ låset till Mode 1



- 1 Håll programmeringskortet över låset i minst 10 sekunder.



- 2 En nollställningston hörs.



- 3 Vänta i 10 sekunder. Håll sedan programmeringskortet över låset igen.



- 4 Jämna toner hörs i 7 sekunder.



- 5 Håll servicekortet över låset inom 7 sekunder.



- 6 En bekräftelseton hörs.

Find out more at:
flexlock.se

Swedstyle AB.

Box 171, SE-567 24 Vaggeryd, Sweden
info@swedstyle.se
+46 393-363 60
www.swedstyle.com

